



## WIRELESS CAMERA---CW3510TX INSTALLATION

1. Connect the supplied adaptor (DC 5V 700mA) to the DC IN jack on the rear of the camera and plug it into AC power outlet. The red LED (power indicator light) on the back of the camera will be lit and the battery (inside the camera) will be charging (green LED).
2. Charge the battery first for 2 hours prior to use.
3. Select the channel you wish to view.

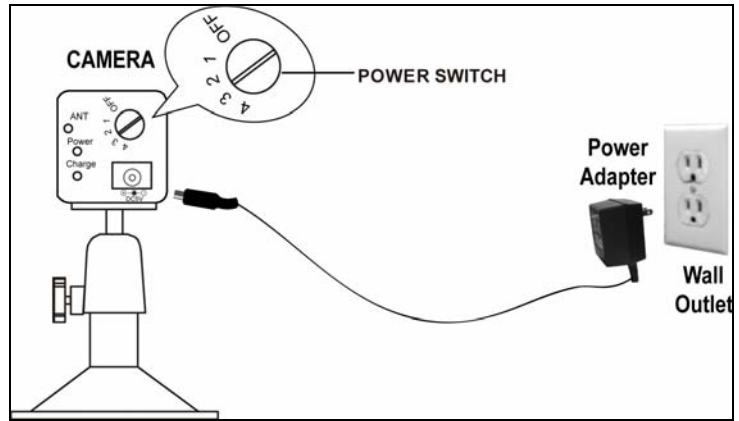

## WIRELESS RECEIVER---CW3510RX

1. Connect the supplied AC adaptor (DC 8V 200mA) to the DC IN jack of the receiver and plug it into AC outlet.
2. Connect the supplied A/V cable to the jack. Plug the yellow colored RCA to the VIDEO IN on the monitor/TV and the white colored RCA to the AUDIO IN respectively.
3. Turn on the power switch.
4. Press the channel selection button to select the same channel as the camera.

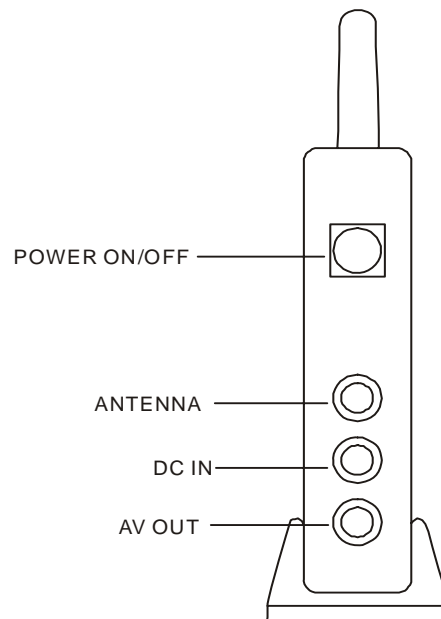

## OPERATION WITH TV/MONITOR AND VCR

1. Connect the provided A/V (audio/video) cable to the A/V jack on the receiver and to the jacks on your VCR's A/V jacks.

Be sure to connect the white connector of the A/V cable to the AUDIO IN jack and the yellow connector of the A/V cable to the VIDEO IN jack on the VCR, if the VCR has only a single jack for video input, connect the yellow plug to it.

2. Connect the other A/V cable (not supplied) to the VIDEO OUT and AUDIO OUT jacks on your VCR. Connect the other ends to VIDEO IN and AUDIO IN jacks on your TV/monitor.

3. Plug the provided AC adapter (DC 8V 200mA) into the DC jack on the receiver and the other end into AC outlet.

Make sure the POWER switch is in the OFF position beforehand.

4. Locate and orient the receiver to get optimal performance.

5. Be sure the TV/monitor and the receiver are turned on.

